

## Savoie table collection

### Care and maintenance

Keeping the product in a good condition prolongs its lifespan. The natural character of wood means that variants in colour, texture and patterns do occur even though the wood is carefully selected. Wood exposed to changes in temperature and humidity might arch slightly and become rough, this is not a defect but a natural character of the material. Oak tends to get small surface cracks over time, this will not have any effect on the durability of the product but only emphasises the beauty of patinated natural materials.

Keep the product in good shape at all time, by following the guide below

- Remove stains immediately to avoid permanent damage of the surface.
- Place the product in a humidity and temperature stable environment, avoiding direct sunlight.
- Use coasters when placing hot or cold items on the surface.
- Avoid placing heavy objects on the product.
- Tighten screws after one month of usage.
- Avoid using sharp or hard objects on the product, as they might scratch or damage the surface.
- Avoid pushing or pulling the product, when moving it, as this might damage the floor and the product.

### Oiled wood surface – Nature and Smoked

Wipe with a moist clean cloth wrung in water or in a solution of mild soap and water. Remove any residue immediately using a clean dry cloth. Oil regularly to preserve the oak. If the wood feels rough with time, we recommend sanding down the dry surface using very fine sandpaper. Then oil the wood to protect it. Use products specifically suited for oiled wood, if the surface seems matt or scratched. Avoid using scouring cream or scouring pads on the surface, as they might scratch or damage the surface.

### Black laquered surface


Wipe with dry or hard wrung cloth. Do not use any harsh detergents. We recommend to use products specially suited for laquered surfaces. Avoid scrubbing on the surface, as it will leave scratches and damage the surface.

### Powder coated aluminium legs

Wipe with a moist clean cloth wrung in water or in a solution of mild soap and water. Remove any residue immediately using a clean dry cloth. Avoid using scouring cream or scouring pads on the surface, as they might scratch or damage the surface.

### Warranty

Eva Solo A/S guarantees that its products are free from manufacturing defects. The warranty covers materials and manufacturing defects, but not problems arising from incorrect use or natural wear and tear.

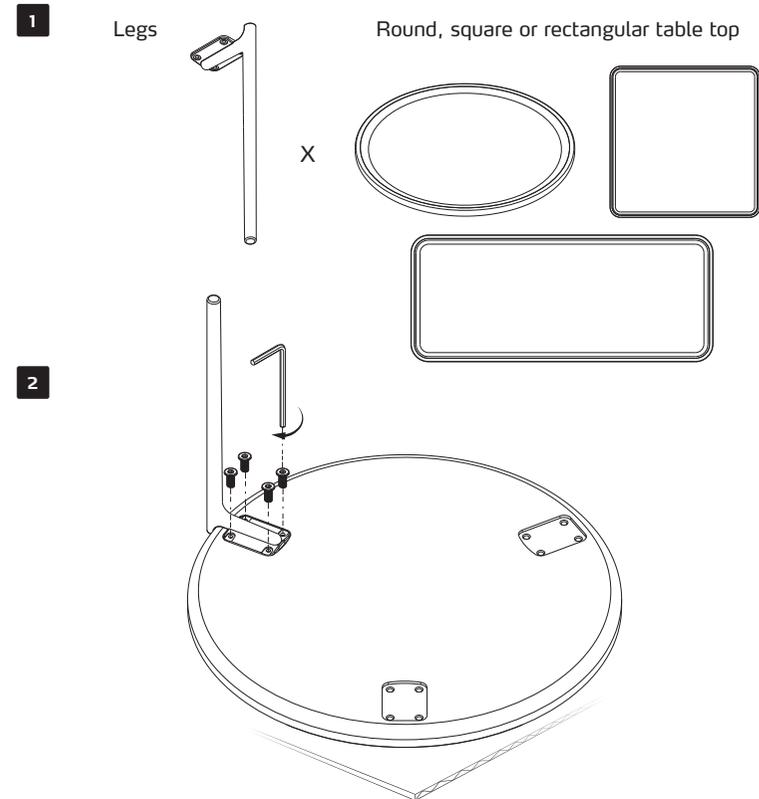

### Complaints

Right of complaint in accordance with applicable legislation. No right of complaint in the case of damage caused by using the products in any way other than for its intended use, or caused by incorrect handling, normal wear, inadequate or incorrect maintenance or incorrect repairs as well as tampering with the products by unauthorised persons. Remember to retain the receipt/invoice as it must be produced in the event of a complaint. Please contact the shop where the product was purchased. Errors and omissions excepted.

### Eva Solo A/S

Måløv Teknikerby 18-20  
2760 Måløv  
Denmark  
Tel.: +45 36 73 20 60  
[www.evasolo.com](http://www.evasolo.com)